

# RapIDmatic

## Instructions for use


1

Ensure loader/cutter is in the locked position (at front of applicator)




2

Roll RapIDTags towards you firmly. Bias the pins outwards to avoid jamming.

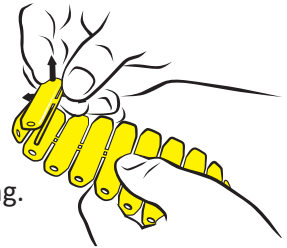

3

Leave the last two RapIDTags unrolled.

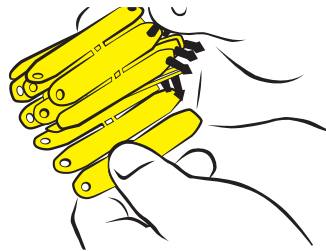


4

Load into drum.



5

Depress the clamp (A) firmly. Slide tags out until location lugs are between first and second tags.

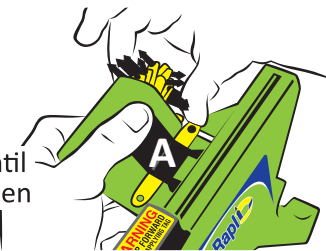


6

Pull trigger to move tag into the Load position.




7

Pull topslide back to cut the tag.

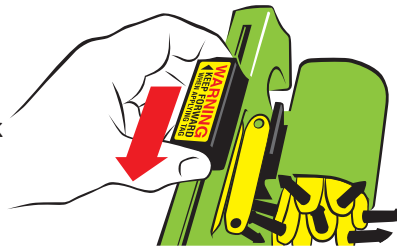

8

Push topslide forward to load into applicator jaw.

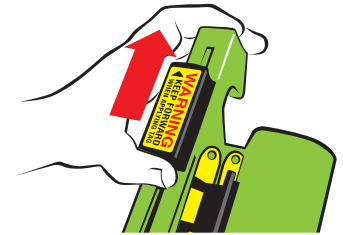

9

Check tag position.



10

Select optimum position on ear for tag. Pull trigger to apply.

